

Easy Step-by-Step Installation for Awnings with Closed-sides

Step 1

Check Package Contents:

Included with each awning you will receive the following:

- 2-3 Top-Rod Brackets (with fasteners) (See Fig. 1A)
- 2 Out-Rod Brackets (with fasteners) (See Fig. 1B)
- 1 Cleat (See Fig. 1C)
- 2 Out-Rods (with fasteners)

Rolled inside your awning you will find the following pre-installed:

- | | |
|-----------------|-----------------|
| 1 Front-Rod | 1 Top-Rod |
| 1 Double Pulley | 1 Single Pulley |
| Pre-sized Rope | |



Fig. 1A




Fig. 1B



Fig. 1C

7" in from edge
of awning

3-5" above
Window

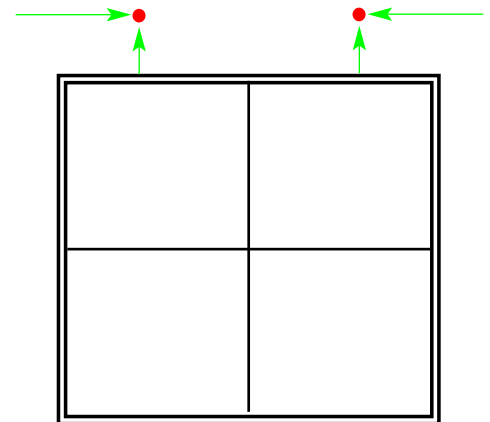

Step 2

Measure the width of your awning. On your wall, find two points 7" in from the edge of the awning and 3-5" above the window (usually under the first lap of siding). Install the Top-Rod Brackets at these points using supplied fasteners.

(If your awning is 7' or wider, 3 Top-Rod Brackets will be included. Center the third bracket between the other two.)

Step 3

Unroll your awning.



Step 4

Hang the pulleys on the outside hooks of Top-Rod Brackets. The double will hang on the right fixture and the single on the left fixture. (See 4-A.) Then center the awning above your window and tighten the Top-Rod into the Top-Rod Brackets. (See 4-B.)

4-A




4-B



**Step
5**

After the Top-Rod is installed, hold one side of the awning plumb against the wall. Mark the center of the Out-Rod Pocket and the outside edge of the awning. Repeat this step to measure the other side.

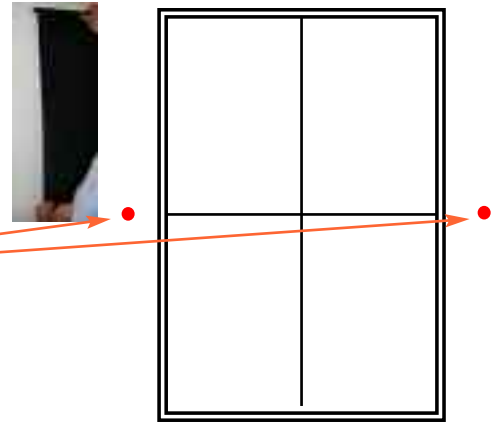

Install the Out-Rod Brackets at the points you just marked.

**Step
6**

Take the nut off of an Out-Rod.

Slide the rod (with eye end towards the back of the awning) into the pocket. Put the nut end of the Out-Rod through the eye end of the Front-Rod. Hand tighten.

Repeat on the other side with the second Out-Rod. Fasten the eye ends of the Out-Rods into the Out-Rod Brackets. Tighten securely. Tighten the nuts at the front of the Out-Rods.



**Step
7**

Install the cleat just below the right hand Out-Rod Bracket, and no lower than the awning valance (picture shows the awning from the inside).



**Step
8**

Pull the slack out of the rope and loop it around the cleat.