


For Installations with Shutters

If there is space between your shutters and your windows, as shown below, mark a point on each side that is halfway between the window and the shutter. Measure between those points to determine your awning width.



If your shutters are mounted right against your windows, mark a point on each side in the center of the shutter frame (as shown below). Measure between these two points to determine your awning width.

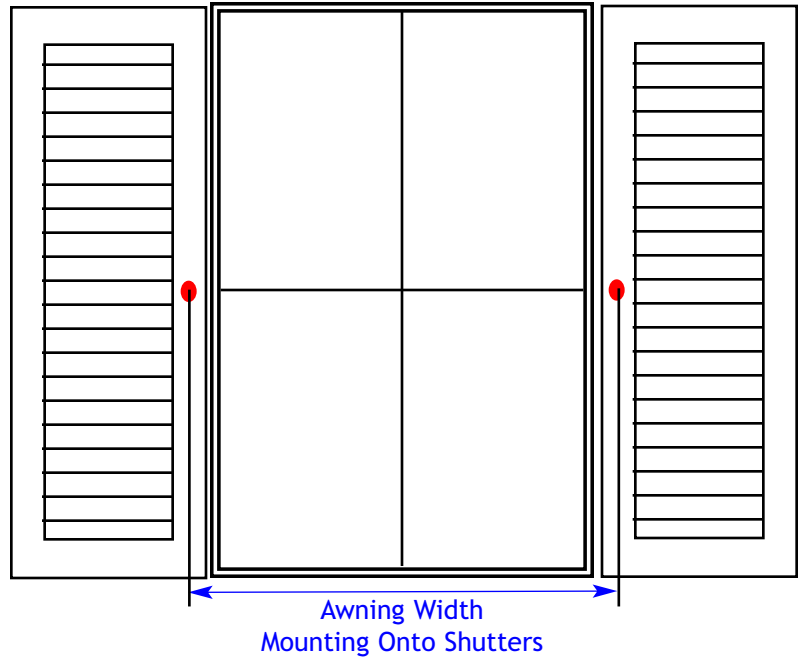